

- To Know XT-13P IP Address, click on Status on the screen
- Login XT-13P Web page by using the following credentials:  
Username: **admin**  
Password: **xontel**

- Change the IP address of the XT-13P

**XonTel**

▶ Status  
▶ Account  
▶ **Network**  
    Basic  
▶ Phone  
▶ Upgrade  
▶ Arming  
▶ Security

**Network-Basic**

**LAN Port**

DHCP  
 Static IP

IP Address: 192.168.1.11  
Subnet Mask: 255.255.255.0  
Default Gateway: 192.168.1.1  
LAN DNS1: 8.8.8.8  
LAN DNS2:

Submit Cancel

- Register XT-13P to your PBX

▶ Status  
▶ **Account**  
    Basic  
▶ Network  
▶ Phone  
▶ Upgrade  
▶ Arming  
▶ Security

**Account-Basic**

**SIP Account**

Status: Registered  
Account: Account 1  
Account Active: Enabled  
Display Label: 641  
Display Name: 641  
Register Name: 641  
User Name: 641  
Password: ●●●●●●

**SIP Server 1**

Server IP: 192.168.1.200 Port: 5060

Submit Cancel

- Configure DTMF key in the XT-13P to unlock the door from the IP monitor

**Phone-Call Feature**

**Forward Transfer**

Account	Account 1
No Answer Forward	Disabled
No Answer Ring Time	30
Target Number	

**DND**

DND	Disabled
Schedule	Whole Day
DND Start Time	00:00
DND End Time	00:00

**Open Lobby**

DTMF	#
------	---

**Open Local Door**

DTMF	#
------	---

Submit Cancel

**Important Note:**

DTMF unlock key in the XT-13P should match the DTMF unlock key in the intercom

- To see camera of the intercom without calling the intercom and unlock the door without calling the intercom in XT-13P, please do the following steps:

1. Enable the feature “ **Open Relay via HTTP** ” in Intercom web page

**Open Relay via HTTP**

Switch: Enabled

UserName: admin

Password: .....

2. Configure Door Phone Monitor in XT-13P BY following the steps below:

**Monitor**

**Door Phone**

Index	Name	URL	User Name	<input type="checkbox"/>
1	door1	192.168.1.37	admin	<input type="checkbox"/>
2	door2	192.168.1.39	admin	<input type="checkbox"/>
3				<input type="checkbox"/>
4				<input type="checkbox"/>
5				<input type="checkbox"/>
6				<input type="checkbox"/>
7				<input type="checkbox"/>
8				<input type="checkbox"/>
9				<input type="checkbox"/>
10				<input type="checkbox"/>

Delete DeleteAll

Device Name: \_\_\_\_\_

Destination URL: \_\_\_\_\_

User Name: \_\_\_\_\_

Password: .....

Add Edit Cancel

- Configure the device name in device name option (for example Door1)
- Configure Intercom IP address in Destination URL (for example 192.168.1.x)
- Configure same user name of Intercom in user name option
- Configure same password as Intercom in password option

**Note:**

To unlock the door from XT-13P you must configure DTMF in the intercom and XT-13P as # only and any other password will not open the door from XT-13P without calling the intercom.